Elitech Elite of technology

RC-5

Ouick Start Guide

Software download: www.elitechlog.com/softwares

Install Battery 1.Use a proper tool (such as a coin) to loosen the

battery cover.



2.Install the battery with "+" side upward and keep it under the metal connector.



3. Put the cover back and tighten the cover.



Note: Do not remove the battery when the logger

is running. Please change it when necessary.

Install Software

1.Please visit www.elitechlog.com/softwares. Select

and download the software.

2.Double click to open the zip file. Follow the

3. When the installation is completed, the ElitechLog software will be ready to use.

Please disable the firewall or close the antivirus software if necessary.

Start/Stop Logger

prompts to install it.

shows. The logger starts logging.

1.Connect the logger to a computer to svnc the logger time or configure parameters as needed. 2.Press and hold () to start the logger until

3.Press and release () to shift between display interfaces 4. Press and hold (II) to stop the logger until

shows. The logger stops logging. Please note all the recorded data cannot be

changed for security reasons.

◆ Do not use the logger in corrosive liquid or excessive heat environment

▲ Important!

◆ Please store the logger in indoor environment.

◆ If this is the first time you use the logger, it is suggested to connect the logger to a computer

to sync the time. ◆ Please dispose or handle the waste logger

properly by local legislation.

Elitech Technology, Inc.

www.elitechlog.com

1551 McCarthy Blvd, Suite 112

Milpitas, CA 95035 USA



Configure Software

access the logger and download the recorded data to local computer if it finds the logger is connected. If not, manually click "Download Data" to download the data.

1.Download Data: ElitechLog software will automatically

2. Filter Data: Click "Filter Data" under Graph tab to select and view your desired time range of the

data. 3.Export data: Click "Export Data" to save Excel/PDF format files to local computer.

4. Configure options: Set logger time, log interval, start delay, high/low limit, date / time format, email etc. (Check User Manual for default parameters)

Note: New configuration will initialize previous recorded data. Please make sure to back up all data before you

configurations. Refer to "Help" for more advanced functions. More product information are available on the company website www.elitechlog.com.

the logger

does not log afte

is enabled in the softwar

=.

nstalled

installed;

=

튽

Technical Specifications

Recording Options
Temperature Range
Temperature Accuracy
Temperature Resolutio
Data Storage Capacity

Stop Mode

Weight

Multi-Use -30°C to 70°C

Certifications

Validation Certificate

Report Generation

Password Protection

Connection Interface

Alarm Configuration

Reprogrammable

Demensions

Software

±0.5(-20°C/+40°C);±1.0(other range)

Six months1/CR2032 button cell

10s~24hour adjustable

32,000 readings

ution 0.1°C

Shelf Life/Battery

Recording Interval

Startup Mode

Protection Class

35g

IP67

Button

Button, software or stop when full

Distributor

Trading as EVOCARE and L&M EOUIPMENT

Ph: 07 3355 8000 Fax: 07 3355 5043

Website: http://www.evocare.com.au Email:

1. Depending on optimal storage conditions

(±15°C to +23°C/45% to 75% RH)



EVOCARE AUSTRALIA PTY LIMITED

EN12830, CE, RoHS

Optional on request

USB 2.0, A-Type

Optional, 2 points

ElitechLog Win or Mac (latest version)

With free Elitech Win or MAC software

80mmx33mmx14mm(LxWxH)

PDF /Word/Excel/Txt report

Hardcopy

sales@evocare.com.au workshop@evocare.com.au warehouse@evocare.com.au accounts@evocare.com.au

P.O. Box 1144, Stafford Old, 4053

A.B.N. 98 078 566 604